


# B-Ware Smart Hive Monitor


## Quick Installation Leaflet

Thank you for purchasing a **Solutionbee B-Ware Smart Hive Monitor**. B-Ware is feature-rich and there are many options for customizing your equipment and software. For simplicity and brevity, this **Quick Installation Leaflet** will only demonstrate the basic features in order to get started. Additional cool features can be found in the on-line **Installation Guide** at [www.solutionbee.com](http://www.solutionbee.com).

**Your Solutionbee Team.**

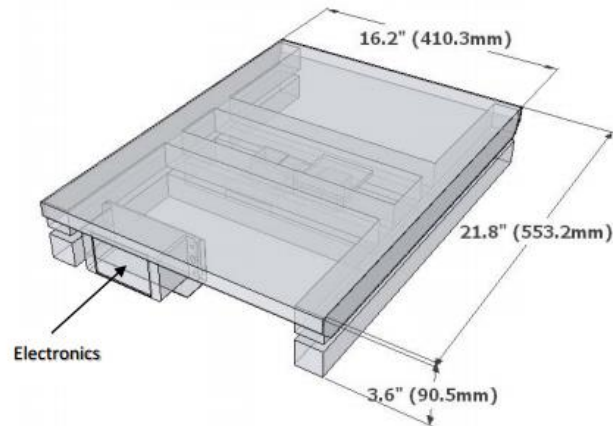

### SMART HIVE MONITOR BUTTONS AND FUNCTIONS

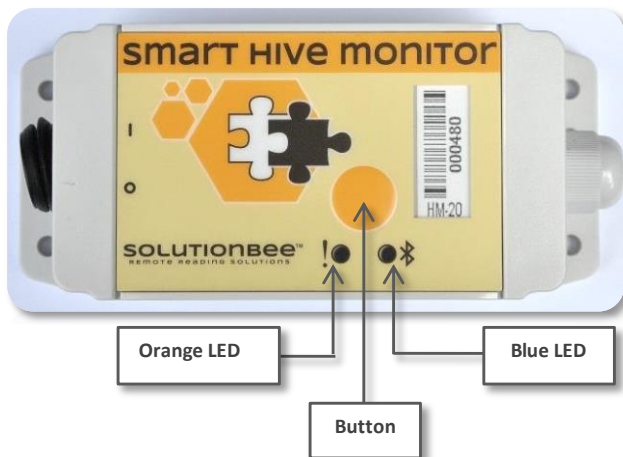

#### Blue LED

- **ON**: the Bluetooth modem is being initialized.
- Slow blink (every second): awaiting connections.
- Fast blink (5 times a second): communicating with a Bluetooth device.
- **OFF**: the Bluetooth modem is turned off.

#### Orange LED

- Button dependent (see Button section)

#### Button

- **Short press (<5 seconds)**: the Bluetooth module is turned on (the blue LED will begin to blink - see Blue LED)
- **Double click**: if the monitor is configured to work with a collector, it will attempt to find and (re)join the collector and transmit its data. The orange LED will blink fast as long as the monitor is attempting to communicate with the collector.
- **Long press (>5 seconds)**: the scale monitor will be tarred to 0. The orange LED will blink 5 times, once a second.

# Installation Steps

## 1 DOWNLOAD AND INSTALL THE B-WARE PHONE APP FROM GOOGLE PLAY OR APPLE STORE

Open **Google Play** from your phone and search for the “B-Ware” application. Select **Install**. Or:

Open **iTunes** from your computer and search for the “B-Ware” application. Install it on your iPad.

## 2 UNPACK THE SMART HIVE MONITOR (SHM)

Open the box, carefully remove the **SHM** and remove the plastic coating from the hive monitor top plate.

## 3 PLACE THE SHM

Remove the hive. Place the SHM on the base. Zero the scale (long press, see **Buttons and Functions**).

## 4 PLACE THE BEEHIVE

Place the beehive centered on top of the SHM. The SHM is delivered ON and it is designed to stay ON. There is no ON/OFF switch.

## 5 OPEN THE PHONE APP OR THE iPad APP

On your smartphone/iPad go to the **Application** menu and open the **B-Ware App**.

## 6 PRESS THE SHM BUTTON

Press the **SHM Button** shortly (<5 seconds) and the Bluetooth module is turned on (the blue LED will begin to blink).

## 7 DISCOVER DEVICE

Press the **Discover Devices** button in your **B-Ware App**. Your phone Bluetooth will be automatically turned ON. Confirm if necessary.

## 8 READ DATA

Select the new discovered monitor in your **B-Ware App** and press the **Read Full Data/Read Data** button.

## 9 PAIR THE DEVICES (ANDROID ONLY)

The SHM and your phone will try automatically to pair at first attempt to read data. **Confirm** the pairing.

## 10 GET A SOLUTIONBEE ACCOUNT ON WWW.SOLUTIONBEE.COM (CUSTOMER LOGIN)

Register as a **new user** on the Solutionbee website by visiting <http://solutionbee.com> and clicking on the orange **Customer Login** link. Please use “solbe” as the registration code when asked during the registration process.

## 11 OPEN ACCOUNT ON THE PHONE APP, UPLOAD DATA TO WEB. OPEN WEB APP AGAIN AND HAVE FUN!

In your **B-Ware App**, select the **Account Settings** icon (little person icon, top right corner) and login to your new Solutionbee account. Select your monitor tile and then the **Upload Data** option. Open [www.solutionbee.com](http://www.solutionbee.com), click on **Customer Login** and view your data!

## 12 GOOD DEED OPTION

Provide your data to the **Bee Informed Partnership** by selecting it under **User Settings/Participation programs** and following the instructions on the Installation Guide. In addition, visit [beeinformed.org](http://beeinformed.org) for more information about the Bee Informed Partnership.